User guide

7.2V

Handheld

Vacuum Cleaner

70385

7.2V Handheld Vacuum Cleaner 70385

Thank you for purchasing this JCB product

JCB is a byword around the world for quality, innovation and success.

With the application of stringent design parameters and utilising high performance, modern materials and manufacturing processes, your **JCB** product has been developed for optimum functionality and practical application.

Used for the purposes for which it is intended, and with careful maintenance as outlined in this user guide, your JCB product will give years of trouble-free service.

IMPORTANT

Please read all of the product safety and operating instructions carefully before using this product. Please pay particular to all sections of this user guide that carry warning symbols and notices.

WARNING!

This is a Warning symbol. This symbol is used throughout the user guide whenever there is a risk of personal injury. Ensure that these warnings are read and understood at all times.

CAUTION!

This is a Caution symbol. This symbol is used throughout the user guide whenever there is a risk of damaging your JCB product. Ensure that these warnings are read and understood at all times.

NOTE:

Used throughout the user guide to provide additional information, hints and tips.

Our products are continually monitored to comply with changing technical standards and requirements. The company reserves the right to alter design and specifications without prior notice. E. & O. E. errors and omissions exempted.

SAFETY INSTRUCTIONS

Personal safety

- **WARNING!: When using this vacuum cleaner, basic safety precautions, including the following, should be followed to reduce the risk of personal injury and material damage. Read all of this User Guide before using this vacuum cleaner.**
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances.
- Never pick up acids, asbestos or asbestos dust.
- Never touch the adaptor or cable with wet hands.
- Unprofessional repairs can be dangerous for users.
- This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.
- To protect against fire, electric shock and personal injury, do not immerse cord, adaptor or cleaner in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.

Product safety

- **CAUTION!:** Never use the appliance without the filter being installed.
- **CAUTION!:** Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Use only JCB approved spare parts and accessories.
- Never modify the cleaner in any way.
- This appliance is not intended for liquid / wet pick-up.

Location

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces eg. ovens or heating appliances.

Electrical requirements

- Check that the voltage on the rating plate of the charger corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Use only the battery pack and chargers supplied with the unit.
- Do not attempt to remove the battery from the unit to charge it.
- Never throw the battery unit into fire.
- Do not remove or damage the battery casing.
- The battery must be recycled or disposed of correctly.

OVERVIEW OF THE APPLIANCE COMPONENTS

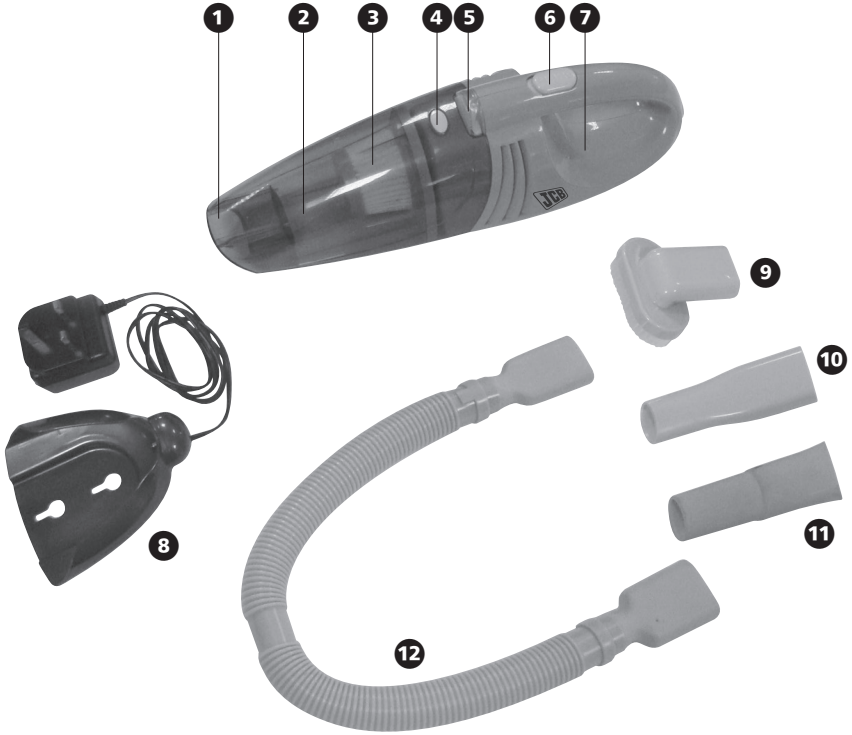

1	Suction inlet	7	Body
2	Dust canister	8	Mains adaptor charger and base
3	Pleated canister filter	9	Dusting brush tool
4	Dust canister release button	10	Crevice tool
5	On-board light	11	Soft crevice tool
6	On/off switch	12	Extension hose

BEFORE USE

For transportation, the On/off switch ❻ is taped in the OFF (O) position. Remove and discard the tape before use.

The vacuum must be fully charged for at least 16 hours before first use. The product must be in the OFF (O) position to charge. Turn off the adaptor charger after 16 hours.

The on-board light ❺ will illuminate to indicate charging. It will always remain on while the charger adaptor is switched on.

NOTE

NOTE: The vacuum is powered by rechargeable nickel metal-hydride batteries. Peak performance may only be realised after the unit has been charged and discharged two or three times. Do not leave the product in a discharged state for an extended period. Do not overcharge. Switch off the charger adaptor after 16 hours. If unused, the battery will remain charged for several weeks, but we recommend discharging the battery fully and then recharging at least once per month.

CHARGING

Ensure the switch is in the OFF (O) position.

Plug the adaptor into a mains outlet and place the vacuum into the charger base **A**.

Turn off the adaptor after 16 hours.

The charger base can be wall mounted for convenient storage.

WARNING!: Always ensure that you are not drilling into the wall adjacent to any electrical wires or pipes such as water or gas.

1. Find a suitable position on the wall or cupboard where the charger base is to be positioned.
2. Mark the fixing points through the bracket.
3. If you are fixing to a solid brick or block wall, use a 6mm masonry drill and drill to a depth of 25mm.
4. If fixing to a wood or cupboard surface, drill a 2mm pilot hole or use a bradawl.

Standard accessories	Application
	Textiles and upholstery (with nozzle)
	Shelves and hard surfaces (with brush)

TOOLS AND ACCESSORIES

Extension hose

Attach the extension hose ⑫ to the suction inlet ❶. The various nozzles can be attached the end of the extension hose **B** or directly to the suction inlet.

Dusting brush ❾

This nozzle is for pelmets, delicate objects etc.

Crevice tool ❿

This nozzle is for awkward places, corners and behind radiators etc.

Soft crevice tool ⓫

This nozzle is for awkward but delicate places, corners and behind radiators etc.

This nozzle is to be attached to the end of the crevice tool **C**.

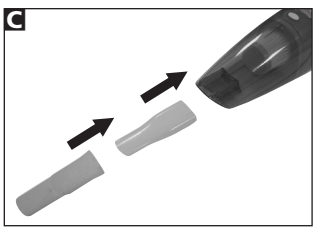

On board light

This illuminates when the vacuum cleaner is switched on and when charging.

SWITCHING ON

Ensure the unit is been fully charged. Switch the cleaner on by sliding the on/off switch ❻ forward to start the motor.

Slide the on/off switch backwards to switch the unit off.

Do not use whilst the unit is being charged.

MAINTENANCE

Emptying the dust canister

1. Turn the cleaner off.
2. Push down on the dust canister release button ❹ on the top of the cleaner D.

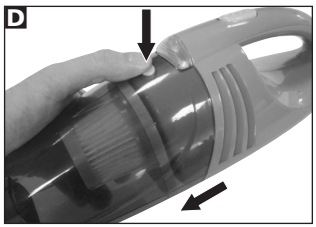

3. Pull the canister ❷ away from the main body ❼ E.

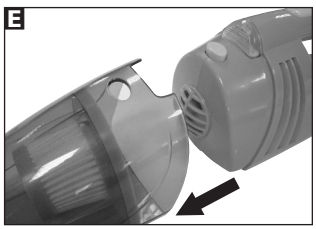

4. Hold the dust canister over the dustbin and pull out the canister filter F.

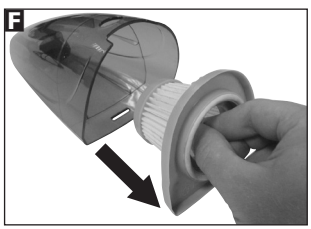

FILTERS

Cleaning the dust canister filters

Clean the dust canister filters every time the canister is emptied to maintain maximum performance.

To remove the canister filter, follow the instructions above for 'Emptying the dust canister'.

With the filter removed, brush it (using the dusting brush ❾ provided) or gently tap it to remove the dust. You may also rinse both the filter and the dust canister with luke-warm water **but they must be thoroughly air-dried before refitting**. Do not use detergents.

CLEANING AND MAINTENANCE

Unplug from the mains supply before cleaning. The vacuum cleaner, especially the dust compartment and all accessories, can be cleaned using a damp cloth or a non-abrasive domestic cleaner and wiped dry.

Purchasing replacement filters

Use only genuine replacement filters which can be purchased from specialist retailers or by calling our Helpline number on page 7.

DISPOSAL

If you want to dispose of the product yourself, the battery must be removed as depicted G.

This product contains sealed nickel metal-hydride batteries. When it reaches the end of its useful life, it must not be disposed of in the normal household waste. The battery must be removed and disposed of at an authorised recycling plant. Your local authority will have a centre which accepts such waste for recycling.

1. Undo the six screws from the main body of the unit ❼.
2. Pull apart.
3. Remove the six battery cells and dispose of in accordance with local regulations.
4. Dispose of the remainder of the product also in accordance with local regulations.

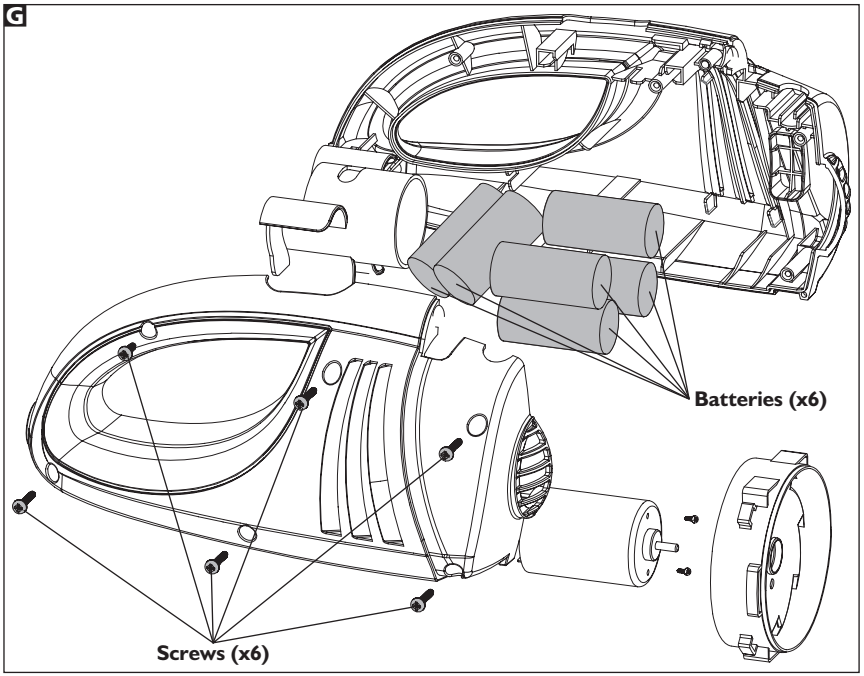

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance
- Serial number as shown on the rating label

UK Helpline and Replacement Parts:

0844 871 0961

ADDRESS

JCB.
Mexborough,
South Yorkshire,
England,
S64 8AJ

GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All JCB products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 3 years of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to JCB at the address shown.

You may be asked to return a copy of proof of purchase. Subject to the exclusions set out below, the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the tools / tubes / hose for blockages.
- Check the adaptor is firmly in the socket.
- Check the socket is working by trying another appliance.

If for any reason this item is replaced during the 3 year guarantee period, the guarantee on the new item will be calculated from the original purchase date.

Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 3 year guarantee, the appliance must have been used according to the instructions supplied.

Exclusions

JCB shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non domestic use.
5. JCB are not liable to carry out any type of servicing work, under the guarantee.
6. The guarantee excludes consumables such as filters.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

For electrical products sold within the European Community. At the end of the electrical product's useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

This JCB product is intended for household use only.

JCB has a policy of continuous improvement in product quality and design. The company, therefore, reserves the right to change the specification of its models at any time.

JCB is used under license.

VC70385 MUK Rev2 09/10

CE